

**Naziv artikla: BAT46699 baterija CAM NP-FM55H SONY Li-Ion**

Baterija prikladna za slijedeće modele uređaja:

**Professional Video Camcorder SONY:**

DSR-PDX10P  
HVR-A1  
HVR-A1E  
HVR-A1J  
HVR-A1N



**Video Camcorder SONY:**

CCD-TR108	DCR-DVD100	DCR-HC1	DCR-PC8
CCD-TR208	DCR-DVD100E	DCR-HC14	DCR-PC8E
CCD-TR408	DCR-DVD101	DCR-HC14E	DCR-PC9
CCD-TR748	DCR-DVD101E	DCR-HC15	DCR-PC9E
CCD-TR748E	DCR-DVD200	DCR-HC15E	DCR-PC100
CCD-TRV106K	DCR-DVD200E	DCR-HC88	DCR-PC101
CCD-TRV107	DCR-DVD201		DCR-PC101E
CCD-TRV108	DCR-DVD201E		DCR-PC101K
CCD-TRV108E	DCR-DVD300		DCR-PC103
CCD-TRV116	DCR-DVD301		DCR-PC103E
CCD-TRV118	DCR-DVD91		DCR-PC104
CCD-TRV126	DCR-DVD91E		DCR-PC104E
CCD-TRV128			DCR-PC105
CCD-TRV138			DCR-PC105E
CCD-TRV208			DCR-PC105K
CCD-TRV208E			DCR-PC110
CCD-TRV218			DCR-PC110E
CCD-TRV218E			DCR-PC115
CCD-TRV228			DCR-PC115E
CCD-TRV228E			DCR-PC120
CCD-TRV238			DCR-PC120BT
CCD-TRV238E			DCR-PC120E
CCD-TRV308			DCR-PC300K
CCD-TRV318			DCR-PC330
CCD-TRV328			DCR-PC330E
CCD-TRV338			DCR-PC6
CCD-TRV408			DCR-PC6E
CCD-TRV408E			
CCD-TRV418			
CCD-TRV418E			
CCD-TRV428			
CCD-TRV428E			
CCD-TRV438E			
CCD-TRV608			
CCD-TRV730			
CCD-TRV740			
CCD-TRV96K			

**Video Camcorder SONY:**

DCR-TRV10	DCR-TRV25	DCR-TRV6	DCR-TV480
DCR-TRV10E	DCR-TRV250	DCR-TRV60	DSR-PDX10
DCR-TRV11	DCR-TRV250E	DCR-TRV60E	GV-D1000 (Video Walkman)
DCR-TRV116	DCR-TRV255	DCR-TRV6E	HDR-HC1
DCR-TRV116E	DCR-TRV255E	DCR-TRV70	HDR-HC1E
DCR-TRV118E	DCR-TRV25E	DCR-TRV70K	HDR-SR1
DCR-TRV11E	DCR-TRV260	DCR-TRV725	HDR-SR1e
DCR-TRV12E	DCR-TRV265	DCR-TRV730	HDR-UX1
DCR-TRV14	DCR-TRV265E	DCR-TRV730E	HDR-UX1e
DCR-TRV140	DCR-TRV27	DCR-TRV738	HVL-IRM (Infrared Light)
DCR-TRV140E	DCR-TRV270E	DCR-TRV738E	HVL-ML20M (Underwater Video Light)
DCR-TRV140U	DCR-TRV27E	DCR-TRV740	HVR-A1P
DCR-TRV145	DCR-TRV280	DCR-TRV740E	HVR-A1U
DCR-TRV145E	DCR-TRV285E	DCR-TRV75	
DCR-TRV14E	DCR-TRV30	DCR-TRV75E	
DCR-TRV15	DCR-TRV300K	DCR-TRV8	
DCR-TRV150	DCR-TRV30E	DCR-TRV80	
DCR-TRV15E	DCR-TRV325	DCR-TRV80E	
DCR-TRV16	DCR-TRV33	DCR-TRV828	
DCR-TRV16E	DCR-TRV330	DCR-TRV828E	
DCR-TRV17	DCR-TRV330E	DCR-TRV830	
DCR-TRV17E	DCR-TRV33E	DCR-TRV830E	
DCR-TRV17K	DCR-TRV33K	DCR-TRV840	
DCR-TRV18	DCR-TRV340	DCR-TRV8K	
DCR-TRV18E	DCR-TRV340E	DCR-TRV940	
DCR-TRV18K	DCR-TRV345	DCR-TRV940E	
DCR-TRV19	DCR-TRV345E	DCR-TRV950	
DCR-TRV19E	DCR-TRV350	DCR-TRV950E	
DCR-TRV20	DCR-TRV351		
DCR-TRV20E	DCR-TRV355		
DCR-TRV22	DCR-TRV355E		
DCR-TRV22E	DCR-TRV360		
DCR-TRV22K	DCR-TRV361		
DCR-TRV230	DCR-TRV38		
DCR-TRV230E	DCR-TRV39		
DCR-TRV235	DCR-TRV40		
DCR-TRV235E	DCR-TRV40E		
DCR-TRV238	DCR-TRV430		
DCR-TRV238E	DCR-TRV430E		
DCR-TRV239	DCR-TRV460		
DCR-TRV239E	DCR-TRV460E		
DCR-TRV24	DCR-TRV480		
DCR-TRV240	DCR-TRV480E		
DCR-TRV240E	DCR-TRV50		
DCR-TRV240K	DCR-TRV50E		
DCR-TRV245	DCR-TRV530		
DCR-TRV245E	DCR-TRV530E		
DCR-TRV24E			

## **Digital Camera SONY:**

Cyber-shot DSC-F707  
Cyber-shot DSC-F717  
Cyber-shot DSC-F828  
Cyber-shot DSC-R1  
Cyber-shot DSC-S30

Cyber-shot DSC-S50  
Cyber-shot DSC-S70  
Cyber-shot DSC-S75  
Cyber-shot DSC-S85

MVC-CD200  
MVC-CD250  
MVC-CD300  
MVC-CD350  
MVC-CD400  
MVC-CD500

Baterija zamjenska za NP-FM30 , NP-FM50 , NP-FM51 , NP-QM50